


7. WIRING DIAGRAM

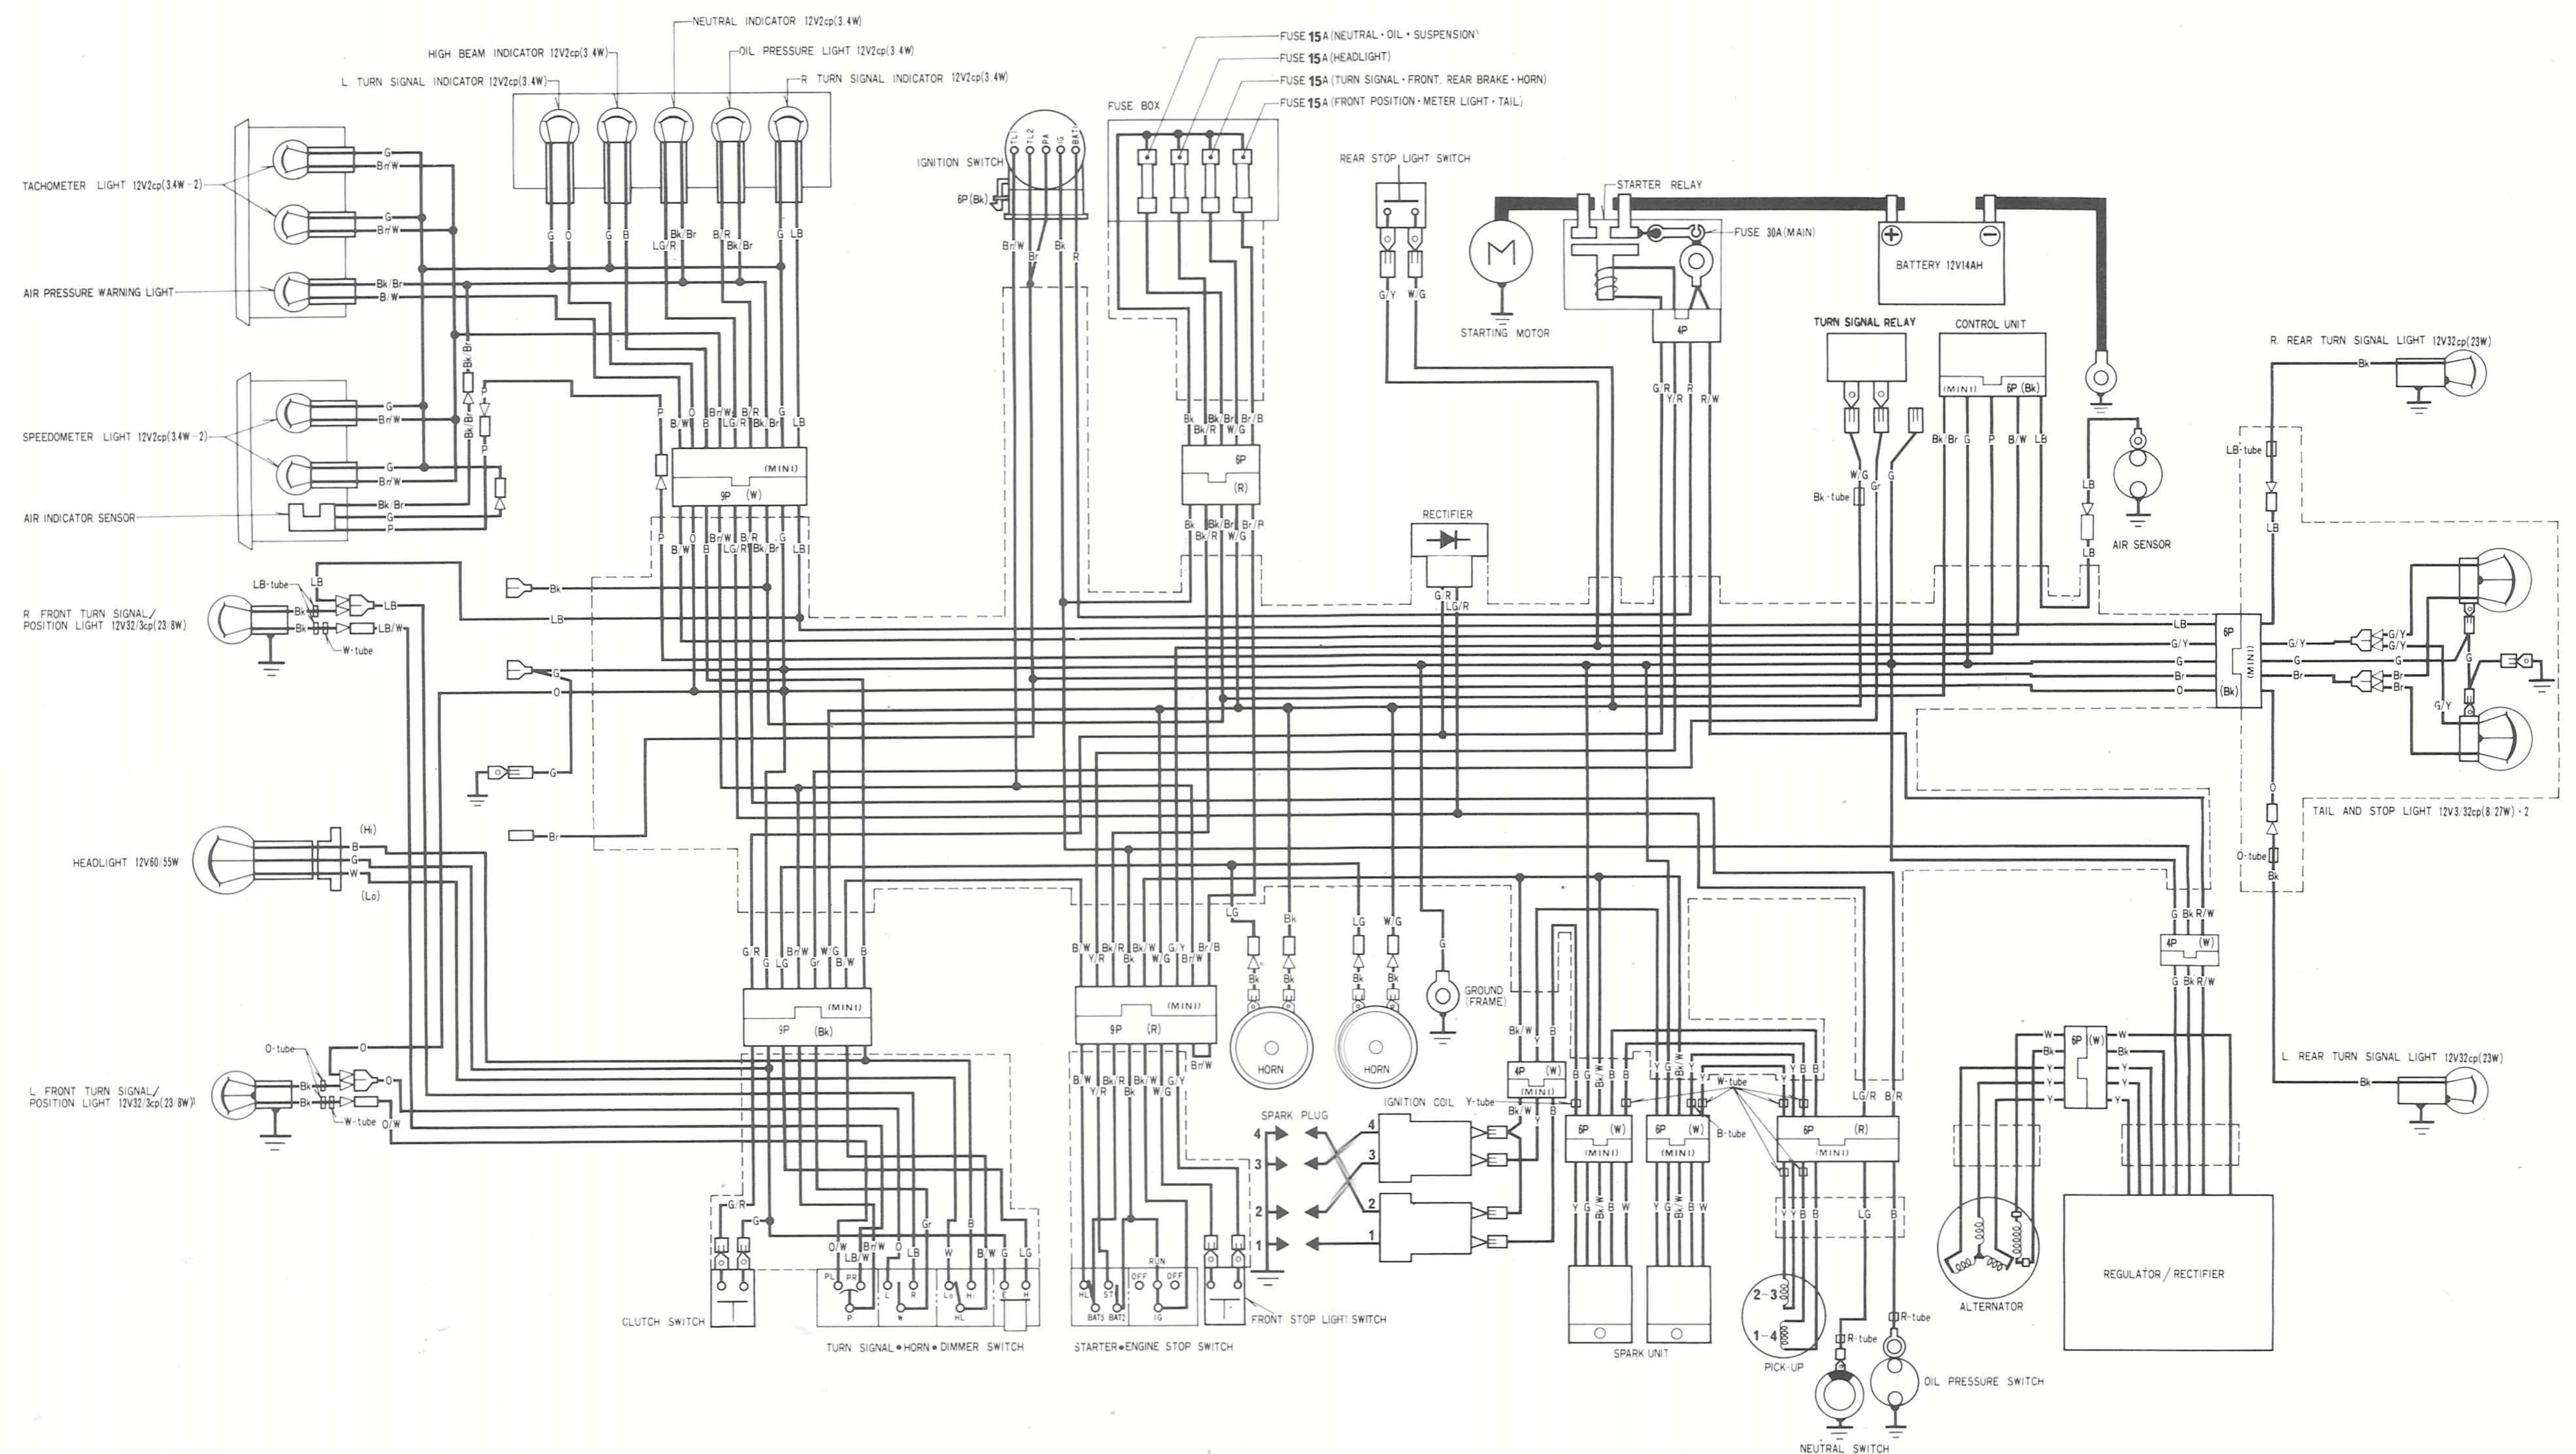

SWITCH CONTINUITY

IGNITION SWITCH					
	BAT1	IG	TL1	TL2	P
OFF					
ON	○	○	○	○	
P					○

STARTER SWITCH				
	BAT5	HL	BAT2	ST
FREE	○	○		
PUSH				○

ENGINE STOP SWITCH	
	BAT2 IG
OFF	
RUN	○
OFF	

TURN SIGNAL SWITCH						
	W	R	L	P	PR	PL
R	○				○	○
N						
L			○			

DIMMER SWITCH			
	HL	Lo	Hi
Lo	○		
(N)			
Hi			○

HORNSWITCH		
	HO	E
FREE		
PUSH		○

- Br Brown Y Yellow
- Bk Black B Blue
- W White Gr Grey
- LG Light Green LB Light Blue
- R Red O Orange
- G Green P Pink

0030Z-461^L-7700