


7. WIRING DIAGRAM

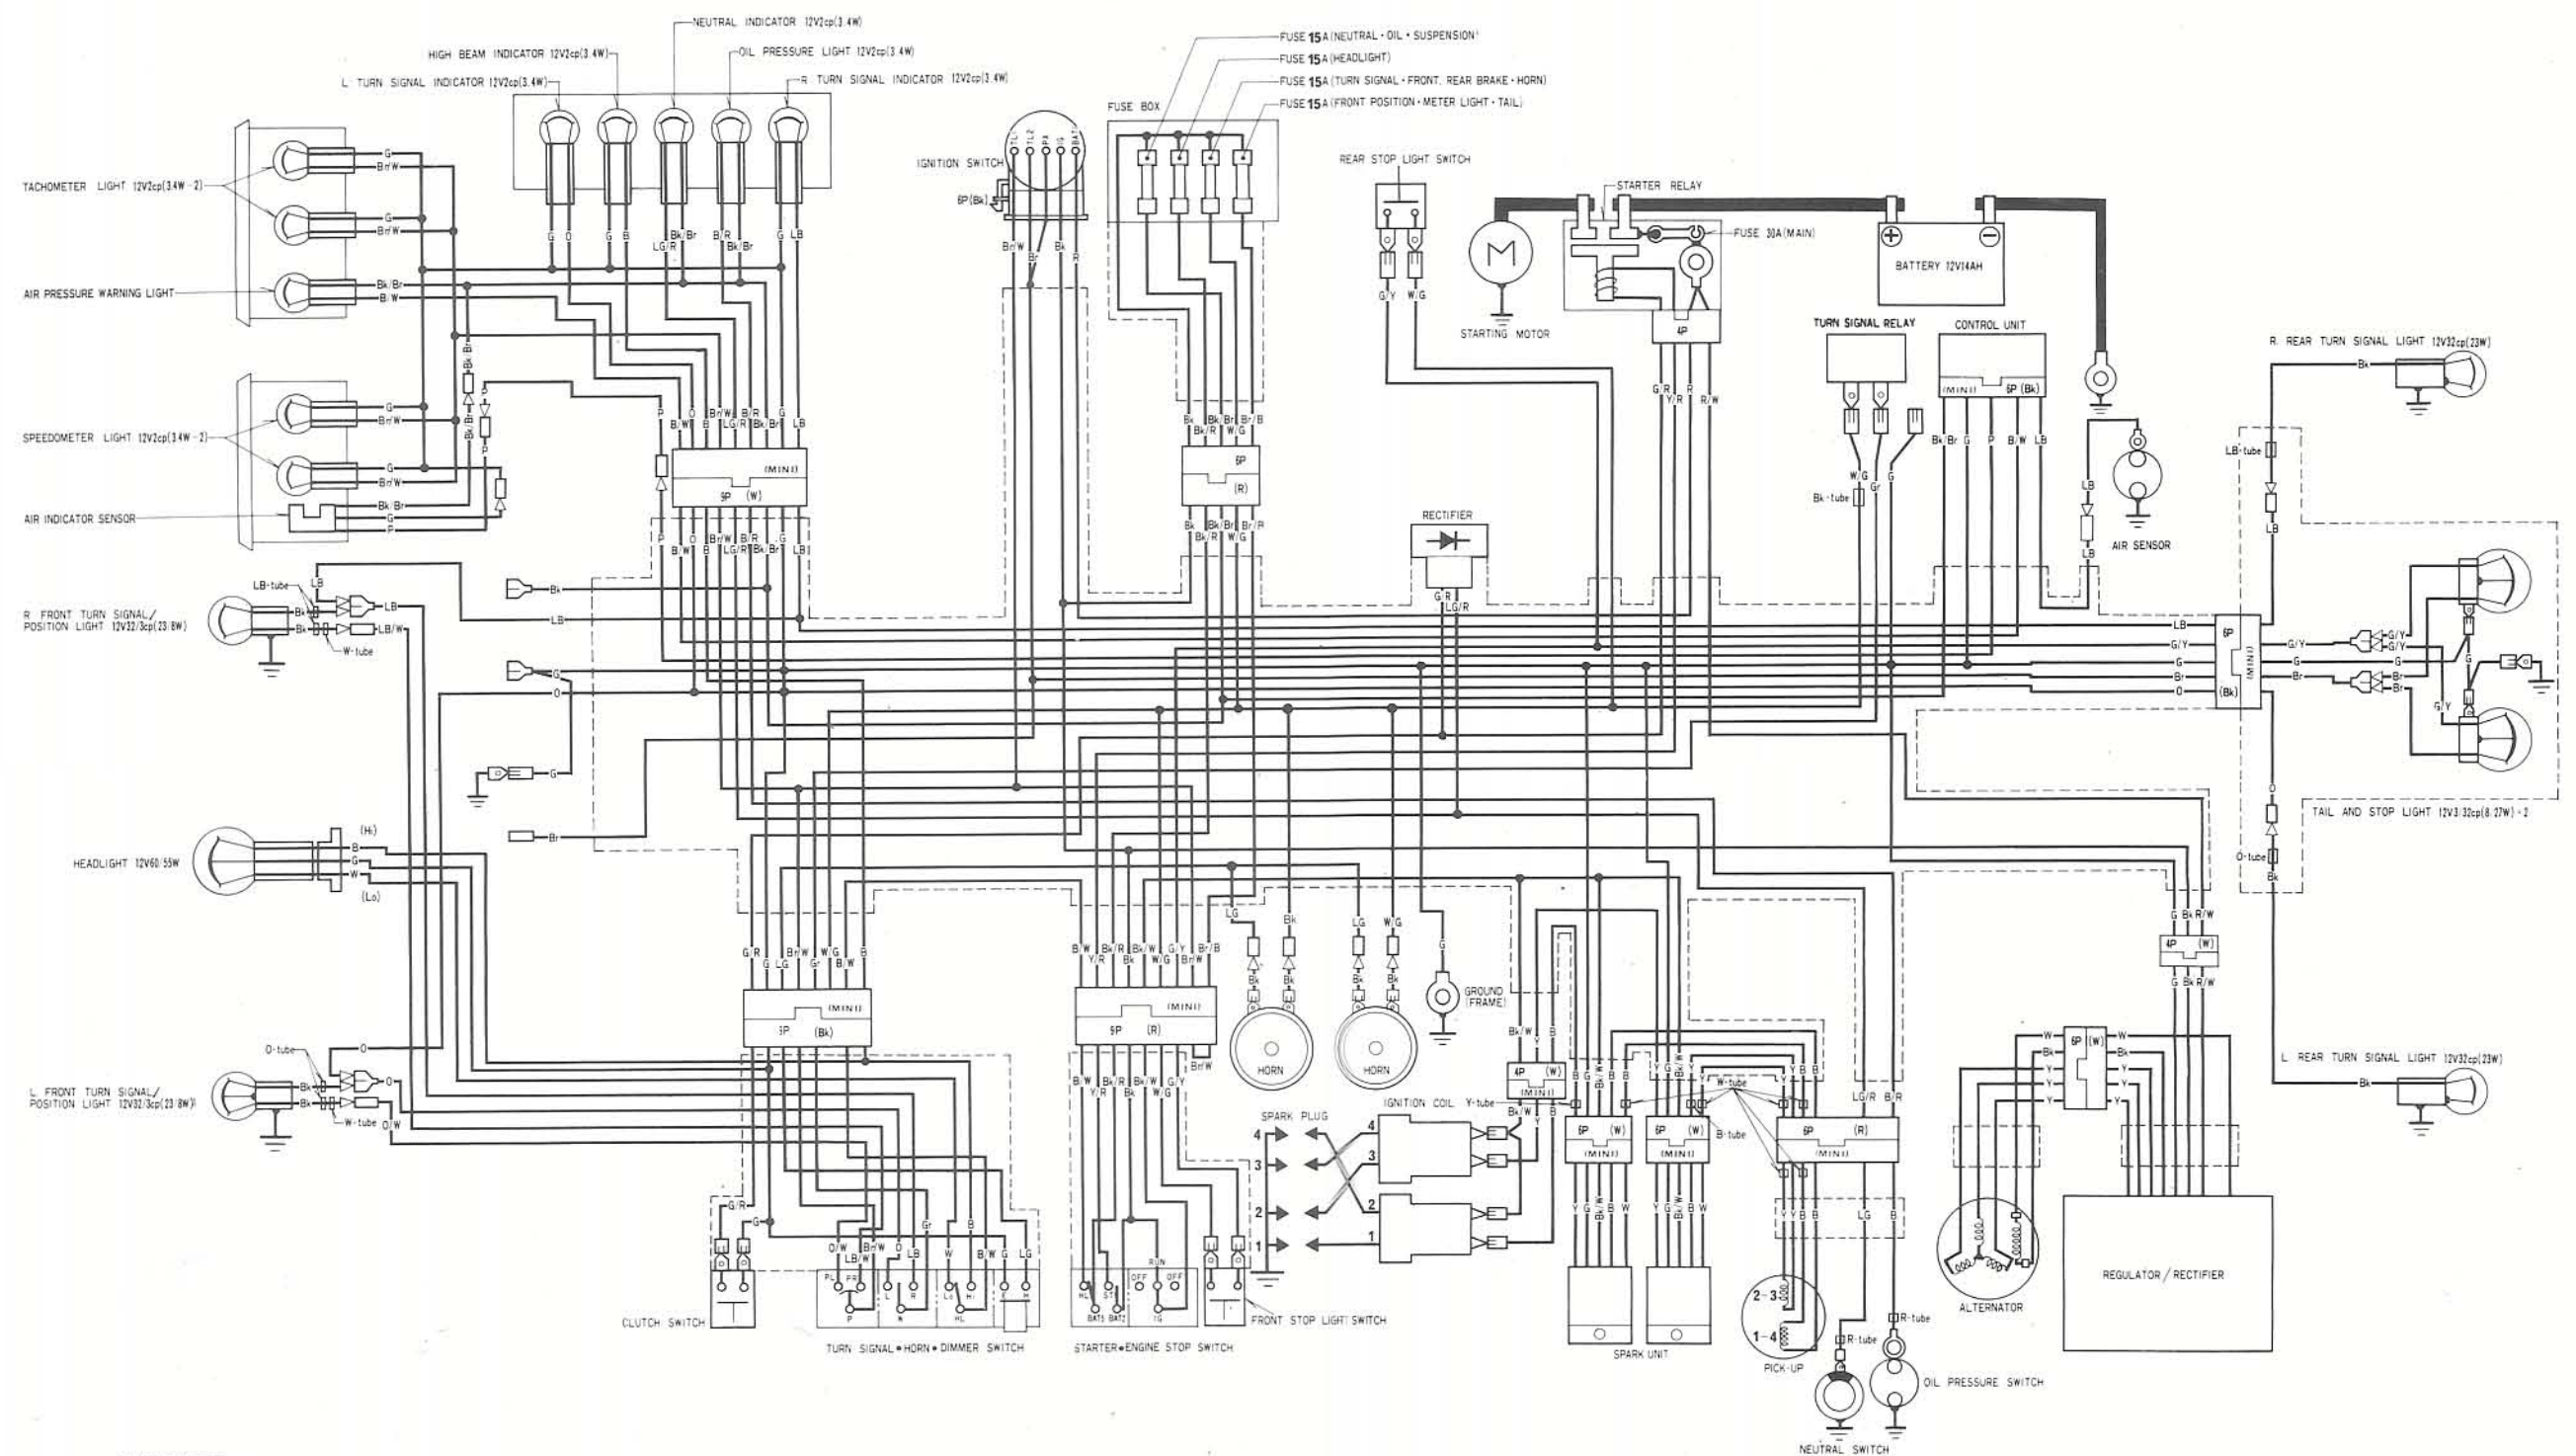

SWITCH CONTINUITY

IGNITION SWITCH

	BAT1	IG	TL1	TL2	P
OFF					
ON	○	○	○	○	○
P	○				○

STARTER SWITCH

	BAT3	HL	BAT2	ST
FREE	○	○		
PUSH				○

ENGINE STOP SWITCH

	BAT2	IG
OFF		
RUN	○	○
OFF		

TURN SIGNAL SWITCH

	W	R	L	P	PR	PL
R	○				○	○
N						
L						

DIMMER SWITCH

	HL	Lo	Hi
Lo	○		
(N)			
Hi			

HORN SWITCH

	HO	E
FREE		
PUSH		○

- Br Brown
- Bk Black
- W White
- LG Light Green
- R Red
- S Green
- Y Yellow
- B Blue
- Gr Grey
- LB Light Blue
- O Orange
- P Pink

0030Z-461^L-7700